

# PROCESS & TEMPERATURE CONTROLLER

**MULTISPAN**

PTC-1202-M1



PV = Process value  
SV = Set Value

## TECHNICAL SPECIFICATION

### INPUT SPECIFICATION:

Input Types	Input	Range
	J	0 to 600 °C
	K	0 to 1200 °C
	PT-100	-99 to 400 °C
	PT.1	-99.9 to 400.0 °C
	0-10V DC	-1999 to 9999
	0-20mA DC	-1999 to 9999
4-20mA DC	-1999 to 9999	
Resolution	J,K,PT-100 = 1 °C	
	PT.1 = 0.1 °C	
	0-10V DC,0-20mA DC,4-20mA DC = 0.1,0.01,0.001,0001	
Indication Accuracy	±1% of FSD ± 1 Count (FSD : full scale deflection)	

### DISPLAY AND KEYS:

Display	Upper : 4 digit, 7 seg 0.8" RED LED Lower : 4 digit, 7 seg 0.56" White LED
Keys	SET, INC, DEC, ENT

### DIMENSION:

Size	101 (H) x 101 (W) x 54 (D) mm
Panel Cutout	92 (H) x 92 (W) mm

### CONTROL METHOD:

Heating	1) PID control with Auto-Tuning 2) ON-OFF control
Cooling	1) BL.TP (Blower Time Proportion) 2) ON-OFF control
Alarm	High/Low/Inband/Outband/ Absolute Low/Absolute Outband

## OUTPUT SPECIFICATION

Relay Output	
Relay	2 nos.
Relay Type	1 C/O (NO-C-NC)
Rating	5A, 230V AC/30 V DC
Transmitter supply	
24V DC	
Modbus Output : RS 485	


## AUXILIARY SUPPLY

Supply voltage	100 to 270V AC, 50-60Hz
Power consumption (VA RATING)	Approx 7 VA @ 230V AC MAX


## ENVIRONMENT CONDITION

Operating Temp.	0 °C to 55 °C
Relative Humidity	UP to 95% RH (non-condensing)
Protection Level	IP-65 (Front side) As per IS/IEC 60529 : 2001


## MECHANICAL INSTALLATION

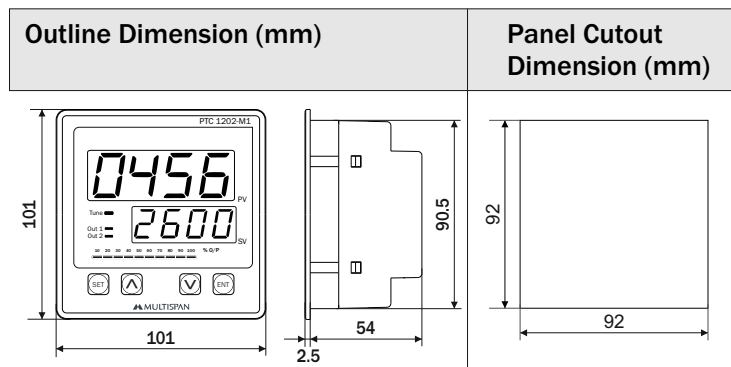

## TERMINAL CONNECTION

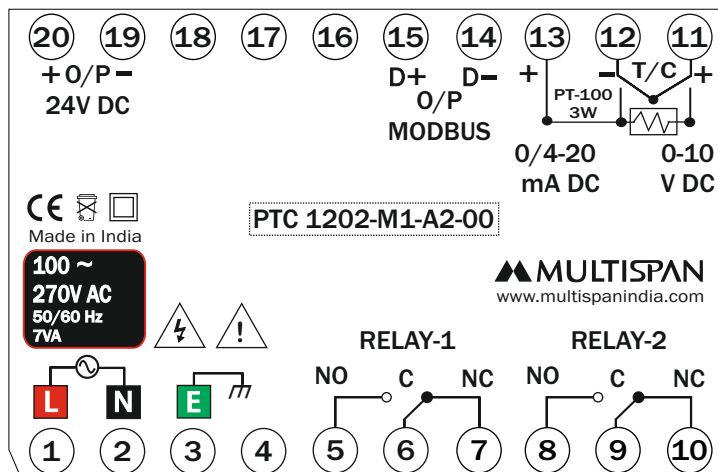

## DISPLAY INDICATION

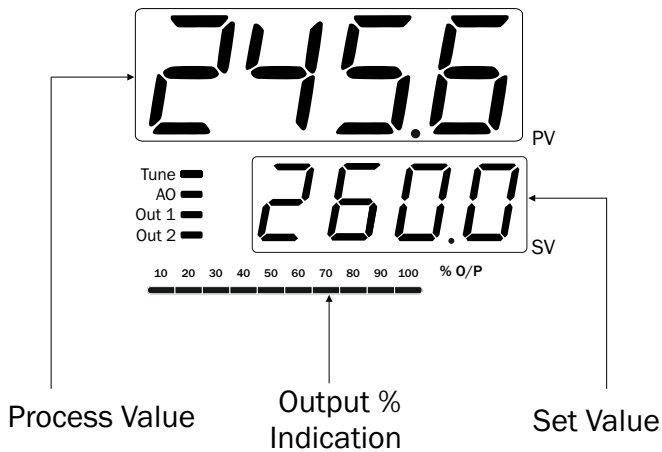

## KEY OPERATION

FUNCTION	PRESS KEY
<b>OPERATOR MODE</b>	
To enter in parameter setting	Press for 5 sec
For start/stop PID auto tuning	Press 6 sec
To go in factory setting mode	+  Press 3 sec
To Reset soak process	Long Press
<b>PARAMETER SETTING MODE</b>	
To set parameter value	
To increment parameter value.	
To decrement parameter value.	
Set parameter to be save & exit.	



## SAFETY PRECAUTION

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If all the equipment is not handled in a manner specified by the manufacturer, it might impair the protection provided by the equipment.



Read complete instructions prior to installation and operation of the unit.



**WARNING :** Risk of electric shock.

## MECHANICAL INSTALLATION GUIDELINES

1. Prepare the panel cutout with proper dimensions as shown above.
2. Fit the unit into the panel with the help of clamp given.
3. The equipment in its installed state must not come in close proximity to any heating source, caustic vapors, oils steam, or other unwanted process byproducts.
4. Use the specified size of crimp terminal (M3.5 screws) to wire the terminal block. Tightening the screws on the terminal block using the tightening torque of the range of 1.2 N.m.
5. Do not connect anything to unused terminals.

## MAINTENANCE

1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
2. Clean the equipment with a clean soft cloth. Do not use isopropyl alcohol or any other cleaning agent.
3. Fusible resistor must not be replaced by operator.

## INSTALLATION GUIDELINES

1. This equipment, being built-in-type, normally becomes a part of main control panel and in such cases the terminals do not remain accessible to the end user after installation and internal wiring.
2. Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
3. Circuit breaker or mains switch must be installed between power source and supply terminal to facilitate power 'ON' or 'OFF' function. However this mains switch or circuit breaker must be installed at convenient place normally accessible to the operator.
4. Use and store the instrument within the specified ambient temperature and humidity ranges as mentioned in this manual.


## WARNING GUIDELINES



**WARNING :** Risk of electric shock.

1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
2. To reduce electro magnetic interference, use wire with adequate rating and twists of the same of equal size shall be made with shortest connection.
3. Cable used for connection to power source, must have a cross section of 1mm or greater. These wires should have insulations capacity made of at least 1.5kV.
4. When extending the thermocouple lead wires, always use thermocouple compensation wires for wiring for the RTD type, use a wiring material with a small lead resistance (5Ω max per line) and no resistance differentials among three wires should be present.
5. A better anti-noise effect can be expected by using standard power supply cable for the instrument.

## FACTORY SETTING

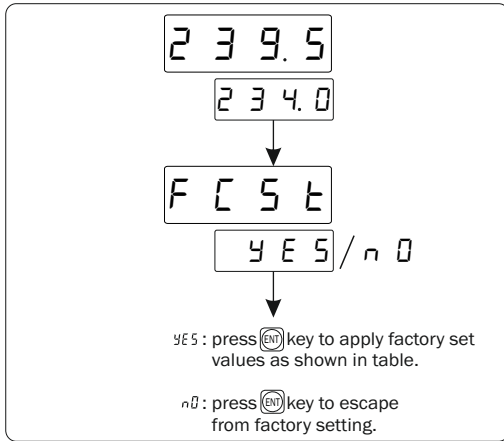

### FACTORY SETTING

SR.	PARAMETER	VALUES
1	PB	20.0° C
2	IT	300
3	DT	75
4	CT	15 sec
5	MR	0° C
6	OFFSET	0° C
7	HYSTERESIS-1	3° C
8	HYSTERESIS-2	3° C
9	C-PB	4.0° C
10	C-ON	1 Sec
11	C-OFF	48 Sec
12	CRFC	0

## PARAMETER MESSAGE DESCRIPTION

C.SEt	Controlling O/P Set Point
SEt 1	Set Point 1 For O/P 1
SEt 2	Set Point 2 For O/P 2
LOw 1	Low Set Point 1
HIG 1	High Set Point 1
LOw 2	Low Set Point 2
HIG 2	High Set Point 2
PASS	Password
INPt	Input ( Sensor )
SLL	Set Low Limit
SHL	Set High Limit
OFFSt	Offset
Pb	Proportional Band For PID Action
It	Integral Time Constant
dt	Derivative Time Constant
Ct	Cycle Time For PID Action
nr	Manual Reset
C-Pb	Cooling PB
C-On	Cooling On Time
C-OF	Cooling Off Time
HYS 1	Hysterisis 1

## PARAMETER MESSAGE DESCRIPTION

HYS 2	Hysterisis 2
OUT 1	OutPut 1 Mode
SOAK	Soak Time Select
SMnd	Soak Mode
SPUt	Soak Unit
SPEñ	Soak Time Value
ñEñD	Soak Time Memory
End	Soak Time End
Ctr 1	Control Action 1
OUT 2	Output 2 Mode
Ctr 2	Control Action 2
ALñ 1	Alarm 1
ALñ 2	Alarm 2
S2ñd	Set 2 Mode
r 1dL	Relay 1 Delay Time
r 2dL	Relay 2 Delay Time
ALtñ	Alarm Time
Pi d	PID Action
OnOF	ON-OFF Action
bl.tP	Blower TP Action
HIGH	High Alarm
LOw	Low Alarm
Out-b	OutBand Alarm
Ab-L	Absolute Low Alarm
In-b	In Band Alarm
Ab-O	Absolute Out Band Alarm
SEC	Second
ñIn	Minute
HOUr	Hour
HEAt	Heating Mode
COOL	Cooling Mode
ALrñ	Alarming Mode
OFF	OFF Mode
YES	Yes
n0	No
SAvE	Save
Indl	Set 2 Individual to Set 1
rLtU	Set 2 Reletive to Set 1
FCS t	Factory Setting

## PARAMETER MESSAGE DESCRIPTION

<i>LDPC</i>	Low percentage
<i>Hi PC</i>	High percentage
<i>Frwd</i>	Forward
<i>rEur</i>	Reverse
<i>Lrn9</i>	Low Range for analog input
<i>Hrn9</i>	High Range for analog input
<i>CrFC</i>	Correction Factor for analog input
<i>FLtr</i>	Filter Time
<i>SLL</i>	Signal Low Limit for 4-20mA input
<i>rLY1</i>	Relay 1 parameter setting
<i>rLY2</i>	Relay 2 parameter setting


<i>SPP5</i>	Soak Passing
<i>SPrU</i>	Soak Remaining
<i>SPrN</i>	Soak Time Normal
<i>Auto</i>	Auto
<i>Addr</i>	Address
<i>bAUD</i>	Baudrate
<i>Prty</i>	Parity
<i>dAtA</i>	Datatype

<i>nOnE</i>	None Parity
<i>EvEn</i>	Even Parity
<i>Odd</i>	Odd Parity
<i>Si nt</i>	Sign Integer
<i>FLDt</i>	Float datatype


## RANGE FOR CONTROL PARAMETER

SR.	PARAMETER	RANGE FOR J,K,PT-100	RANGE FOR PT.1	RANGE FOR ANALOG INPUT	
1	PB	0.0 to 999.9 °C	0.0 to 999.9 °C	0.0 to 999.9	
2	IT	0 to 9999	0 to 9999	0 to 9999	
3	DT	0 to 9999	0 to 9999	0 to 9999	
4	CT	4 to 99 sec	4 to 99 sec	4 to 99 sec	
5	MR	-9 to 9 °C	-9.0 to 9.0 °C	DP 3	-0.099 to 0.099
				DP 2	-0.99 to 0.99
				DP 1	-9.9 to 9.9
				DP 0	-99 to 99
6	OFFSET	-20 to 20 °C	-20.0 to +20.0 °C	DP 3	-0.999 to 0.999
				DP 2	-9.99 to 9.99
				DP 1	-99.9 to 99.9
				DP 0	-999 to 999
7	HYS1	1 to 100 °C	0.1 to 100.0 °C	DP 3	0.001 to 0.999
				DP 2	0.01 to 9.99
				DP 1	0.1 to 99.9
				DP 0	1 to 999
8	HYS2	1 to 100 °C	0.1 to 100.0 °C	DP 3	0.001 to 0.999
				DP 2	0.01 to 9.99
				DP 1	0.1 to 99.9
				DP 0	1 to 999
9	C-PB	2.0 to 25.0 °C	2.0 to 25.0 °C	2.0 to 25.0	
10	C-ON	1 to 20 sec	1 to 20 sec	1 to 20 sec	
11	C-OF	5 to 200 sec	5 to 200 sec	5 to 200 sec	
12	R1DL	0.00 to 99.59 mm.ss	0.0 to 99.59 mm.ss	0.00 to 99.59 mm.ss	
13	R2DL	0.00 to 99.59 mm.ss	0.0 to 99.59 mm.ss	0.00 to 99.59 mm.ss	
14	ALTM	0 to 99 sec	0 to 99 sec	0 to 99 sec	
15	CRFC	-	-	DP 3	-0.999 to 0.999
				DP 2	-9.99 to 9.99
				DP 1	-99.9 to 99.9
				DP 0	-999 to 999
16	FLTR	-	-	0.1 to 10.0 Sec	
17	SLL	-	-	0.0 to 5.0 mA	

## PARAMETER SETTING

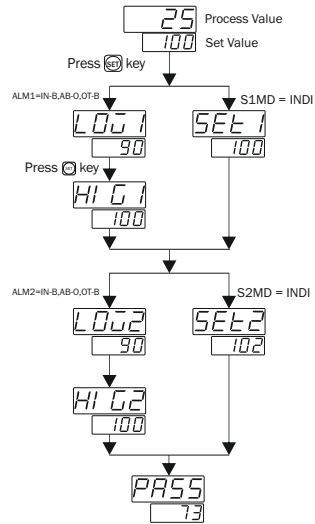

### Password 73 Explanation

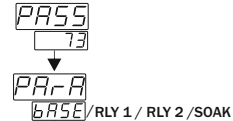


- Parameter 1: Basic Configuration (bA5E)
- Parameter 2: Relay 1 (rLY 1)
  - Case 1: Heat
  - Case 2: Cool
  - Case 3: Alarm
  - Case 4: Off
- Parameter 3: Relay 2 (rLY 2)
  - Case 5: Heat
  - Case 6: Cool
  - Case 7: Alarm
  - Case 8: Off
- Parameter 4: Soak Timer (SOAK)
- Parameter 5: Modbus parameter (nBUS)

Note : In case 4 & 8 relay will be in off condition

Case 4 & 8 : OFF




### Parameter 1 : Basic Configuration (bA5E)

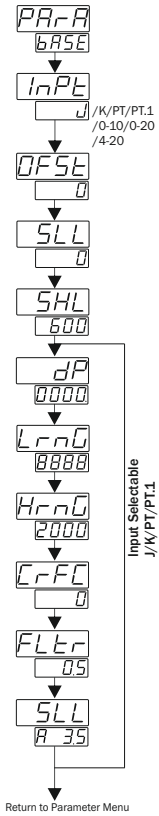

Input Selectable J/K/PT/PT.L


Return to Parameter Menu

### Parameter 2 : Relay 1 (rLY 1)

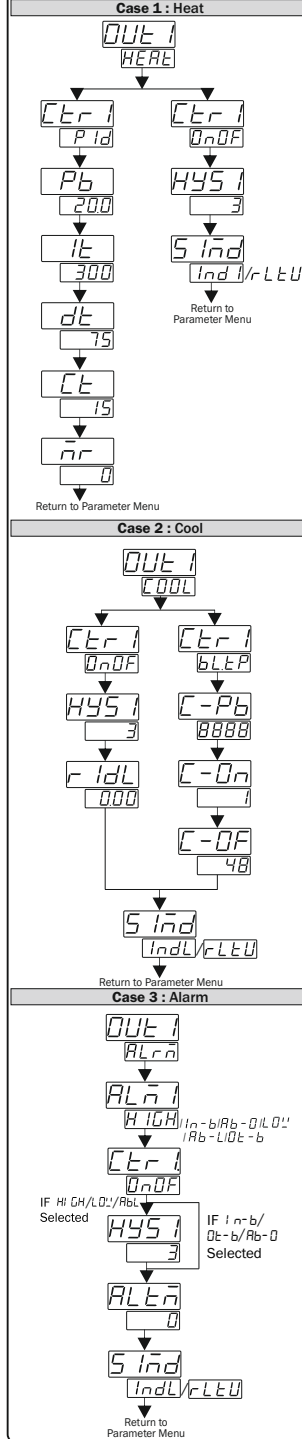


Return to Parameter Menu

### Parameter 3 : Relay 2 (rLY 2)

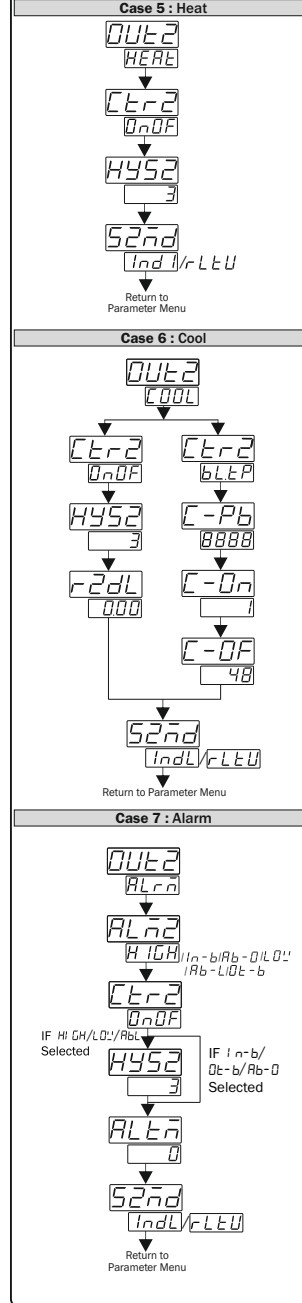


Return to Parameter Menu

### Parameter 4 : Soak Timer (SOAK)

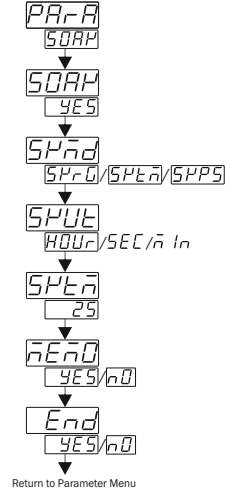

Return to Parameter Menu

### Parameter 5 : Modbus Setting (nBUS)

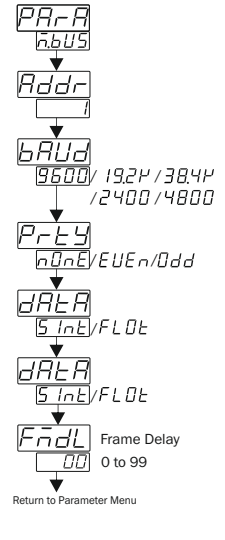

Return to Parameter Menu

## CONTROL FUNCTION

